





# MINI CANAL

## INSTALLATION OF THE WOODEN COVER PLATE

*Energy*  
**SAVERS**  
**LOW-H<sub>2</sub>O**

### Standard delivery

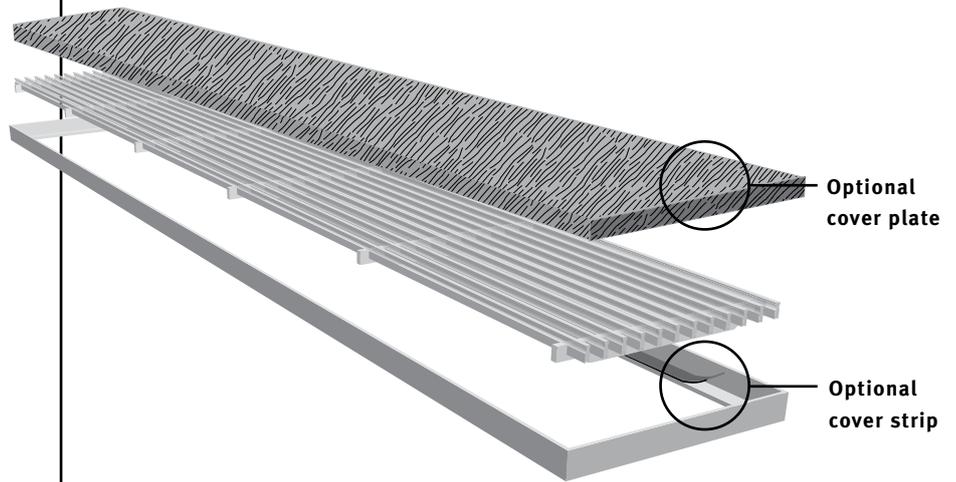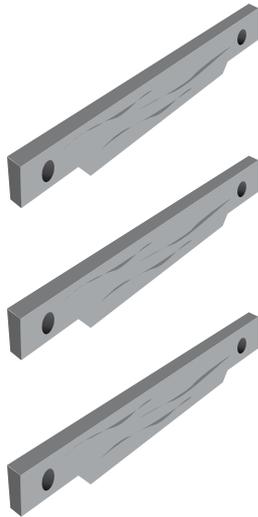

When the trench is installed in a concrete floor, the wooden spacers or optional cover plate must be installed before the concrete is poured. This will prevent deformation of the trench.

